


Original operating instructions



ZFS / ZFL / ZFW

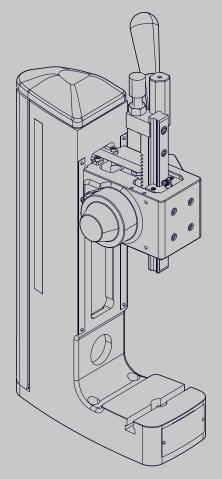

Edition: 01/15/2025, Version: 8

TOX<sup>®</sup> PRESSOTECHNIK SE & Co. KG, Riedstrasse 4, 88250 Weingarten / Germany www.tox.com



# Table of contents

### 1 Important information

1.1	Legal note	6
1.2	Exclusion of liability	6
1.3	Conformity	6
1.4	Validity of the document	7
1.4.1	Content and target group	7
1.4.2	Other applicable documents	7
1.5	Gender note	7
1.6	Displays in the document	8
1.6.1	Display of warnings	8
1.6.2	Display of general notes	8
1.6.3	Highlighting of texts and images	9
1.7	Contact and source of supply	10

### 2 Safety

2.1	Basic safety requirements	11
2.2	Organizational measures	12
2.2.1	Safety requirements for the operating company	12
2.2.2	Selection and qualifications of personnel	13
2.3	Fundamental hazard potential	14
2.3.1	Electrical hazards	14
2.3.2	Thermal hazards	14
2.3.3	Pneumatic hazards	15
2.3.4	Contusions	15
2.3.5	Hydraulic hazards	15
2.3.6	Electromagnetic hazards	16
2.3.7	Laser	16
2.3.8	Hazardous substances	16
2.3.9	Noise	17
2.4	Safety symbols	18



### 3 About this product

3.1	Intended use	19
3.1.1	Safe and correct operation	19
3.1.2	Foreseeable misuse	20
3.1.3	Substances harmful to the wetting properties of lacquers (LABS)	20
3.2	Product identification	20
3.2.1	Type plate	20
3.3	Product overview and function description	21

#### 4 Technical data

4.1	Data sheet and type plate	. 22	)
-----	---------------------------	------	---

### 5 Transport and storage

5.1	Safety during transport	23
5.2	Storage when not in use	24
5.3	Transport by lifting device	25
5.4	Dispatch for repair	26

#### 6 Installation

6.1	Safety during installation	. 27
6.2	Requirements for installation	. 29
6.2.1	Set-up location	. 29
6.3	Installing accessories	. 30
6.3.1	Installing process monitoring (option)	. 30
6.3.2	Installing the ergonomic handle (optional)	. 31
6.3.3	Installing the stroke counter (optional)	. 32
6.3.4	Installing the force sensor (optional)	. 34
6.3.5	Install the return stroke lock (option)	. 36
6.3.6	Installing the slide table (optional)	. 38
6.3.7	Installing travel sensor (option)	. 39
6.3.8	Installing the tool holding fixture (optional)	. 40



### 7 Commissioning

7.1	Safety during the commissioning	41
7.1.1	Safety device	41
7.2	Requirements for the commissioning	42

### 8 Operation

8.1	Safety in operation	. 43
8.2	Requirements for operation	. 43
8.3	Process monitoring	. 43
8.4	Setting the open height of the press head	. 44
8.5	Fine adjustment of working stroke (option)	. 46
8.6	Setting working depth	. 47
8.7	Resetting the stroke counter (optional)	. 47
8.8	Adjusting the return stroke lock (optional)	. 48
8.9	Setting the return stroke	. 51
8.10	Setting the travel sensor (option)	. 52

### 9 Troubleshooting

9.1	Safety during troubleshooting	53
9.2	Detecting faults	54

#### Maintenance table

#### 10 Maintenance

10.1	General information	56
10.2	Safety during maintenance	57
10.3	Requirements for maintenance	57
10.3.1	Set system to maintenance position	57
10.4	TOX <sup>®</sup> FinePress maintaining	58
10.4.1	TOX <sup>®</sup> FinePress inspecting	58
10.4.2	Inspecting the fastening of the press head	59
10.4.3	Inspecting and cleaning movable parts and guides	60



11	Repairs	
11.1	Safety during repairs	61
12	Disassembly and Disposal	
12.1	Safety during disassembly and disposal	62
12.2	Decommissioning	62
12.3	Shutdown	63
12.4	Disassembling	64
12.5	Disposal	64
13	Appendices	
13.1	Declaration of conformity	65

### Index



# 1 Important information

### 1.1 Legal note

All rights reserved.

Operating instructions, manuals, technical descriptions and software published by TOX<sup>®</sup> PRESSOTECHNIK SE & Co. KG ("TOX<sup>®</sup> PRESSOTECHNIK") are copyright and must not be reproduced, distributed and/or otherwise processed or edited (e.g. by copying, microfilming, translation, transmission in any electronic medium or machine-readable form). Any use - including of extracts - contrary to this condition is prohibited without approval in writing by TOX<sup>®</sup> PRESSOTECHNIK and may be subject to criminal and civil legal sanctions.

If this manual refers to goods and/or services of third parties, this is for example only or is a recommendation by TOX<sup>®</sup> PRESSOTECHNIK.

TOX<sup>®</sup> PRESSOTECHNIK does not accept any liability or warranty/guarantee with reference to the selection, specifications and/or usability of these goods and services. The use and/or representation of trademarked brands that do not belong to TOX<sup>®</sup> PRESSOTECHNIK are for information only; all rights remain the property of the owner of the trademarked brand.

Operating instructions, manuals, technical descriptions and software are originally compiled in German.

### 1.2 Exclusion of liability

TOX<sup>®</sup> PRESSOTECHNIK has checked the contents of this publication to ensure that it conforms to the technical properties and specifications of the products or plant and the description of the software. However, discrepancies may still be present, so we cannot guarantee complete accuracy. The supplier documentation included with the system documentation is an exception.

However, the information in this publication is checked regularly and any required corrections are included in subsequent editions. We are grateful for any corrections and suggestions for improvement. TOX<sup>®</sup> PRESSOTECHNIK reserves the right to revise the technical specifications of the products or plant and/or the software or documentation without prior notice.

## 1.3 Conformity

The product is compliant with EU guidelines. See separate Declaration of conformity or installation declaration.



# 1.4 Validity of the document

#### 1.4.1 Content and target group

This manual contains information and instructions for the safe operation and safe maintenance or servicing of the product.

- All information in this manual is up to date at the time of print. TOX<sup>®</sup> PRESSOTECHNIK reserves the right to make technical changes that improve the system or increase the standard of safety.
- The information is intended for the operating company as well as operating and service personnel.

#### 1.4.2 Other applicable documents

In addition to the available manual, further documents can be supplied. These documents must also be complied with. Other applicable documents can be, for example:

- additional operating manuals (e.g. of components or of a whole system)
- Supplier documentation
- Instructions, such as software manual, etc.
- Technical data sheets
- Safety data sheets
- Data sheets
- Schematics

### 1.5 Gender note

In order to enhance readability, references to persons that also relate to all sexes are normally only stated in the usual form in German or in the corresponding translated language in this manual, thus e.g. "operator" (singular) for male or female, or "operators" (plural) for male or female". This should in no way convey any gender discrimination or any violation of the principle of equality, however.



## 1.6 Displays in the document

#### 1.6.1 Display of warnings

Warning signs indicate potential dangers and describe protective measures. Warning signs precede the instructions for which they are applicable.

#### Warning signs concerning personal injuries

#### \Lambda DANGER

#### Identifies an immediate danger!

Death or severe injuries will occur if appropriate safety measures are not taken.

→ Measures for remedial action and protection.

#### 

#### Identifies a potentially dangerous situation!

Death or serious injury may occur if appropriate safety measures are not taken.

➔ Measures for remedial action and protection.

### **▲** CAUTION

#### Identifies a potentially dangerous situation!

Injury may occur if appropriate safety measures are not taken.

→ Measures for remedial action and protection.

#### Warning signs indicating potential damage

#### NOTE

#### Identifies a potentially dangerous situation!

Property damage may occur if appropriate safety measures are not taken.

➔ Measures for remedial action and protection.

#### 1.6.2 Display of general notes

General notes show information on the product or the described action steps.



Identifies important information and tips for users.

### 1.6.3 Highlighting of texts and images

The highlighting of texts facilitates orientation in the document.

- ✓ Identifies prerequisites that must be followed.
- 1. Action step 1
- 2. Action step 2: identifies an action step in an operating sequence that must be followed to ensure trouble-free operation.
  - $\triangleright$  Identifies the result of an action.
- Identifies the result of a complete action.
- → Identifies a single action step or several action steps that are not in an operating sequence.

The highlighting of operating elements and software objects in texts facilitates distinction and orientation.

- <In square brackets> identifies operating elements, such as buttons, levers and (valves) stopcocks.
- "with quotation marks" identifies software display panels, such as windows, messages, display panels and values.
- **In bold** identifies software buttons, such as buttons, sliders, checkboxes and menus.
- In bold identifies input fields for entering text and/or numerical values.



# 1.7 Contact and source of supply

Only use original spare parts or spare parts approved by TOX® PRESSOTECHNIK. TOX® PRESSOTECHNIK SE & Co. KG Riedstraße 4 88250 Weingarten / Germany Tel. +49 (0) 751/5007-767 E-Mail: info@tox-de.com For additional information and forms see www.tox.com



# 2 Safety

## 2.1 Basic safety requirements

The product is state of the art. However, operation of the product may involve danger to life and limb for the user or third parties or damage to the plant and other property.

For this reason the following basic safety requirements will apply:

- Read the operating manual and observe all safety requirements and warnings.
- Operate the product only as specified and only if it is in perfect technical condition.
- Remedy any faults in the product or the plant immediately.



## 2.2 Organizational measures

#### 2.2.1 Safety requirements for the operating company

The operating company is responsible for compliance with the following safety requirements:

- The operating manual must always be kept available at the operation site of the product. Ensure that the information is always complete and in legible form.
- In addition to the operating manual, the generally valid legal and other binding rules and regulations must be provided for the following content and all personnel must be trained accordingly:
  - Work safety
  - Accident prevention
  - Working with hazardous substances
  - First aid
  - Environmental protection
  - Traffic safety
  - Hygiene
- The requirements and contents of the operating manual must be supplemented by existing national regulations (e.g. for prevention of accidents and for environmental protection).
- Instructions for special operating features (e.g. work organization, work processes, appointed personnel) and supervisory and reporting obligations must be added to the operating manual.
- Take action to ensure safe operation and make sure that the product is maintained in a functional condition.
- Only allow authorized persons access to the product.
- Ensure that all personnel work with awareness of safety and potential dangers with reference to the information in the operating manual.
- Provide personal protective equipment.
- Maintain all safety and information on dangers regarding the product complete and in legible condition and replace as required.
- Do not make any changes, carry out attachments or conversions to the product without the written approval of TOX<sup>®</sup> PRESSOTECHNIK. Action contrary to the above will not be covered by the warranty or the operating approval.
- Make sure that the annual safety inspections are carried out and documented by an expert.



### 2.2.2 Selection and qualifications of personnel

The following safety requirements are applicable for the selection and qualifications of personnel:

- Only appoint persons to work on the plant who have read and understood the operating manual, and in particular, the safety instructions before starting work. This is particularly important for persons who only work on the plant occasionally, e.g. for maintenance work.
- Only allow persons appointed and authorized for this work access to the plant.
- Only appoint reliable and trained or instructed personnel.
- Only appoint persons to work in the danger zone of the plant who can perceive and understand visual and acoustic indications of danger (e.g. visual and acoustic signals).
- Ensure that assembly and installation work and the initial commissioning are performed exclusively by qualified personnel who have been trained and authorized by TOX<sup>®</sup> PRESSOTECHNIK.
- Maintenance and repairs must be performed by qualified and trained personnel only.
- Ensure that personnel who are being trained, instructed or are in an apprenticeship can only work on the plant under the supervision of an experienced person.
- Have work on electrical equipment performed only by electricians or trained persons under the direction and supervision of an electrician in accordance with the electrotechnical regulations.



## 2.3 Fundamental hazard potential

Fundamental hazard potentials exist. The specified examples draw attention to known hazardous situations, but are not complete and do not in any way provide safety and risk awareness action in all situations.

### 2.3.1 Electrical hazards

Attention should be paid to electrical hazards particularly inside the components in the area of all assemblies of the control system and motors of the installation. The following basically applies:

- Have work on electrical equipment performed only by electricians or trained persons under the direction and supervision of an electrician in accordance with the electrotechnical regulations.
- Always keep the control box and/or terminal box closed.
- Before commencing work on electrical equipment, switch off the main switch of the system and secure it against being switched back on inadvertently.
- Pay attention to the dissipation of residual energy from the control system of the servomotors.
- Make sure that the components are disconnected from the power supply when carrying out the work.

#### 2.3.2 Thermal hazards

During operation piece parts may become hot and cause burns when touched. Hazardous positions are generally marked with a symbol. See Safety symbols, Page 18

- Wear individual protective equipment.
- Before starting work, make sure that surfaces have cooled down sufficiently.



### 2.3.3 Pneumatic hazards

Attention must be paid to pneumatic hazards particularly on the pneumatic supply lines and connection points.

The following basically applies:

- Allow work to be carried out on pneumatic equipment by authorized service personnel only.
- Wear individual protective equipment.
- Do not exceed the permissible pressure.
- First switch on compressed air when all hose connections have been established and secured.
- Do not uncouple any hoses under pressure.
- If hoses slip off, switch off the compressed air supply immediately.

#### 2.3.4 Contusions

Contusions and hand injuries can occur in the radius of action of the product. The following applies generally:

- Make sure that that no persons are located in the danger area during operation.
- During necessary work in the danger area (e.g. maintenance, cleaning), secure the system against unexpected, accidental and unauthorized activation.
- Make sure that parts or tools cannot fall down or descend as a result of stored energy. Use appropriate fuses.

#### 2.3.5 Hydraulic hazards

Attention must be paid to hydraulic hazards particularly on the supply lines, connection points and vent points.

The following applies generally:

- Allow work to be carried out on hydraulic equipment by authorized service personnel only.
- Wear individual protective equipment.
- Do not exceed the permissible pressure.
- Do not remove any hoses under pressure.
- Never vent hydraulic components under pressure.



### 2.3.6 Electromagnetic hazards

Electromagnetic hazards are to be taken into account in the area of electromagnetically vibrating or oscillating components.

Regular work on and with electromagnetically vibrating or oscillating components can cause disorders in the blood flow of the fingers as well as neurological and motoric dysfunctions.

The following applies generally:

- Wear protective anti-vibration gloves when performing necessary work!
- Electromagnetic fields can have an indirect effect on heart pacemakers and other implants. Adhere to safety distances.

#### 2.3.7 Laser

Depending on the model and features, lasers can be installed for the purpose of recognition. There is a danger of looking into the laser in some situations. If this is not avoided, eye injuries may result.

The following applies generally:

- Do not look into the direct or the reflected beam.
- If the laser beam hits the eye, deliberately close the eyes and move the head immediately out of the beam.
- When using the laser, no optical instruments are to be used for viewing the source of the beam, since this can lead to exceeding the exposure limit values.
- Manipulation (modification) of the laser equipment is inadmissible.

#### 2.3.8 Hazardous substances

The following safety requirements apply when handling chemical substances:

- Observe the applicable safety regulations on handling chemical substances and the information on the manufacturer's safety data sheets of hazardous substances.
- Wear individual protective equipment.
- In the event of eye or skin contact, rinse the affected area, change contaminated clothing and visit a doctor if necessary. Provide appropriate equipment (eye wash bottle, washbasin) near the workplace.
- Groundwater hazardous substances must not get into the ground or sewage system. Collect groundwater hazardous substances and dispose of them properly.



#### 2.3.9 Noise

Depending on the equipment, an increase in the noise level can arise in the sphere of the product.

- Keep the duration of the exposure at a minimum.
- Wear individual protective equipment.



# 2.4 Safety symbols

Safety symbols are important components of the safety concept and help to prevent accidents. The safety symbols provide information about potential hazards that could cause serious injuries.

The following safety symbols can be attached on the product:

Symbol	Hazard	Notes
	Warning of suspended load	Do not stay in the danger zone of the suspended load.
	5	Identifies fork-lift truck brackets.
		Identifies attachment point.
555	Warning of hot surfaces	In the area of motors, drives and fans.
4	Warning of electrical voltage	In the area of the entire control box.
	Warning of crushing	Risk of crushing in the working area.





# 3 About this product

### 3.1 Intended use

The machine in conjunction with the designated tool is used for

- Installing, press fitting
- Punching, pressing (of function elements)
- Riveting, crimping, flaring
- Punching, piercing
- Embossing, marking
- Tensioning, clamping, crimping
- Pressing, compressing
- Clinching, joining

of sheet metal or mechanical modules.

#### 3.1.1 Safe and correct operation

Intended use includes the following conduct:

- Only operate with the components for which it is specified.
- Follow all instructions in this operating manual.
- Comply with the specified maintenance intervals and perform maintenance work correctly.
- Operate in compliance with the conditions of the technical data.
- Operation with fully assembled and functional safety devices.
- Activities may only be carried out by persons who are qualified or authorized for this purpose.

Any other use or application beyond this does not come under the scope of intended use.



### 3.1.2 Foreseeable misuse

Use contrary to intended use includes the following foreseeable misuse:

- Operation under conditions that deviate from the technical data.
- Operation without fully assembled and functional connections.
- Operation without fully assembled and functional safety devices.
- Modifications to the product without prior approval by TOX<sup>®</sup> PRESSOTECHNIK and the approving authority.
- Incorrect parameterization.
- Execution of activities by persons who are not qualified or authorized to do so.

The operating company is exclusively responsible for all personal injury and property damage resulting from non-intended use. Non-intended use will not be covered by the warranty or the operating approval.

#### 3.1.3 Substances harmful to the wetting properties of lacquers (LABS)

No substances containing silicone, are knowingly processed and used.

### 3.2 **Product identification**

#### 3.2.1 Type plate


The details on the type plate ensure clear identification of components and the specific operating parameters.

The type plate is attached permanently on the component.



# 3.3 Product overview and function description

The force of rotation of the hand level is tranferred to the working ram. This results in a constant force development over the entire working stroke.

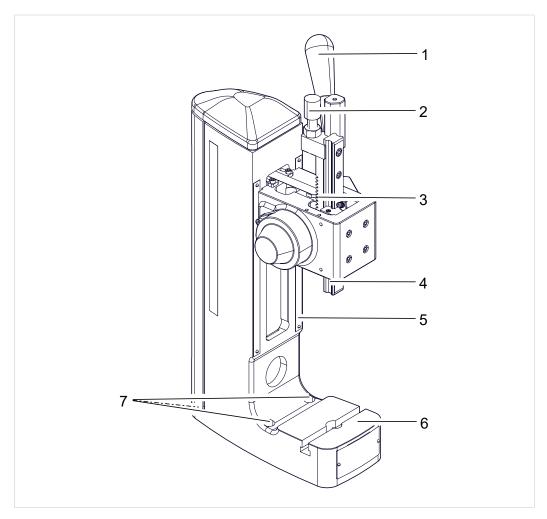

#### Fig. 1 Product overview

	Designation	Function
1	Hand lever	Drives the ram onto the workpiece.
2	Knurled screw	Fine adjustment of working depth.
3	Toothed rack	Transfers the force to the ram.
4	Ram	Transfers the force to the workpiece.
5	Height adjustment scale	Facilitates the adjustment of the open height.
6	Press bed	With T-groove for taking up tools.
7	Fastening holes	For screw fitting to the floor.



# 4 Technical data

# 4.1 Data sheet and type plate

For technical data see data sheet and the type plate attached to the product. www.tox.com



# 5 Transport and storage

### 5.1 Safety during transport

### 🗥 WARNING

#### Hazard from suspended loads!

Severe crushing, impacts and serious accidents as a result of improper transportation and falling load!

- → Only use lifting gear that is appropriate and in perfect technical condition, as well as load attachment devices with an adequate safe working load.
- → Never stand or work under suspended loads.
- → Make sure that that no person is in the danger area.
- → When transporting and setting down, make sure that no parts of the body become jammed.
- → Wear suitable personal protective equipment (e.g. safety boots).

### **A** CAUTION

#### Injury from toppling and falling products!

- ➔ Secure product from toppling, falling and accidentally moving.
- The transportation may only be carried out by authorized personnel.
- The product may only be transported with empty liquid containers.
- The product may only be transported with the transport pallet or transport device provided.
- The product may only be lifted with suitable lifting devices at suitable lifting points.

See Safety symbols, Page 18.

- Note the weight of the product. See technical data sheet.
- Note the center of gravity of the product. See general arrangement drawing.



# 5.2 Storage when not in use

### 

#### Injury from toppling and falling products!

→ Secure product from toppling, falling and accidentally moving.

The following applies:

- Do not store the product outdoors.
- Protect the product against the influence of the weather.
- Avoid temperature fluctuations, so as to prevent corrosion from condensation.
- Seal connection openings.



# 5.3 Transport by lifting device

A threaded bore hole is provided for a ring bolt for lifting the TOX<sup>®</sup> FinePress.

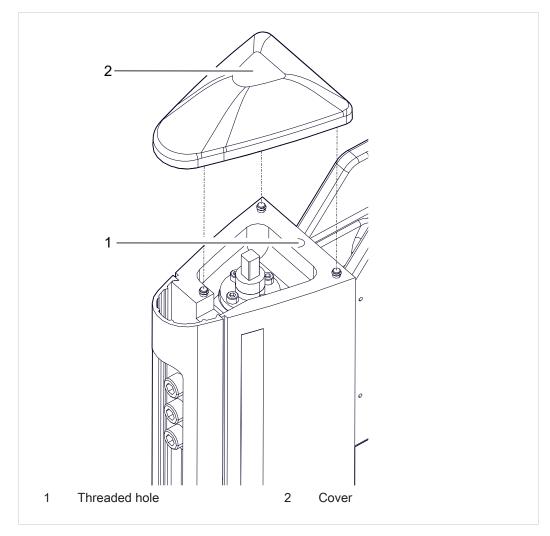


Fig. 2 Transport by lifting device

- 1. Remove the cover from the press frame.
- 2. Remove the crank, ring bolt and other loose parts from the TOX<sup>®</sup> FinePress.
- 3. Screw the ring bolt into the threaded bore.



# 5.4 Dispatch for repair

To dispatch the product for repair to TOX<sup>®</sup> PRESSOTECHNIK, please proceed as follows:

- Fill in the "Accompanying repair form". This we supply in the service sector on our website or upon request via e-mail.
- Send us the completed form via e-mail.
- Then you will receive the shipping documents from us via e-mail.
- Send us the product with the shipping documents and a copy of the "Accompanying repair form".

For contact data see Contact and source of supply, Page 10 or www.tox.com.



# 6 Installation

## 6.1 Safety during installation

The installation may only be carried out by trained and authorized personnel.

#### **A** DANGER

#### Electrical hazards in case of contact with live parts!

Electric shock, burns or death in case of contact with live parts!

- → Have all work on the electrical equipment performed by an electrician.
- ➔ Disconnect power supply.
- → Wait for residual energy to disspate safely (at least 3 minutes).

#### **WARNING**

**Ejecting parts and compressed air from compressed air conducting lines!** Serious injuries to eyes and body cavities!

- → Always connect and disconnect lines without pressure.
- → Pay attention to maximum permitted pressures.
- → Wear individual protective equipment.

#### 

#### Hazard from suspended loads!

Severe crushing, impacts and serious accidents as a result of improper transportation and falling load!

- Only use lifting gear that is appropriate and in perfect technical condition, as well as load attachment devices with an adequate safe working load.
- → Never stand or work under suspended loads.
- → Make sure that that no person is in the danger area.
- → When transporting and setting down, make sure that no parts of the body become jammed.
- → Wear suitable personal protective equipment (e.g. safety boots).



## 

### Tripping points from laid supply lines!

Injuries from tripping and falling!

- $\rightarrow$  Avoid tripping points when setting up.
- → Mark unavoidable tripping points with warning sign.



# 6.2 Requirements for installation

#### 6.2.1 Set-up location

The set-up location:

- Must be free from dust and dirt
- Must be a closed room
- Must have a firm, level floor
- Must have sufficient space and easy access to the system parts
- Prevent the spray of sparks
- The floor must have sufficient load bearing capacity for the weight of the system parts and stresses caused by movements
- The stability must be ensured

Information on technical data, operating conditions, etc. for the intended use can be found in type sheet or the product-specific data sheet and circuit diagram.



1

The plant must be screwed to the substrate.




# 6.3 Installing accessories

#### 6.3.1 Installing process monitoring (option)

➔ Please see the separate operating manual for the installation of the process monitoring system.




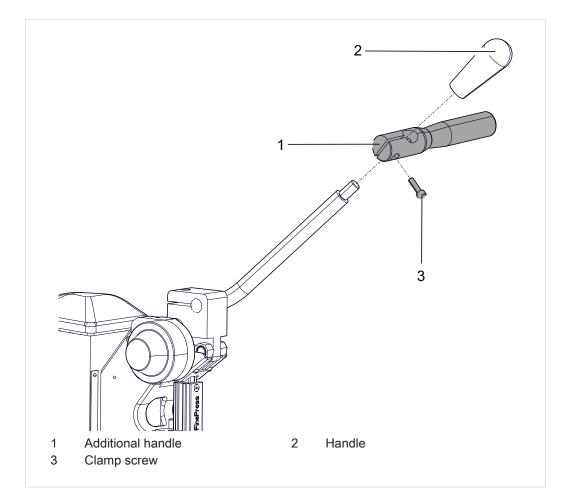

### 6.3.2 Installing the ergonomic handle (optional)

- 1. Unscrew the handle of the hand lever.
- 2. Slide the ergonomic handle onto the hand lever.
- 3. Screw the additional handle in the desired position with the clamping screw.
- 4. Reattach the handle of the hand lever.



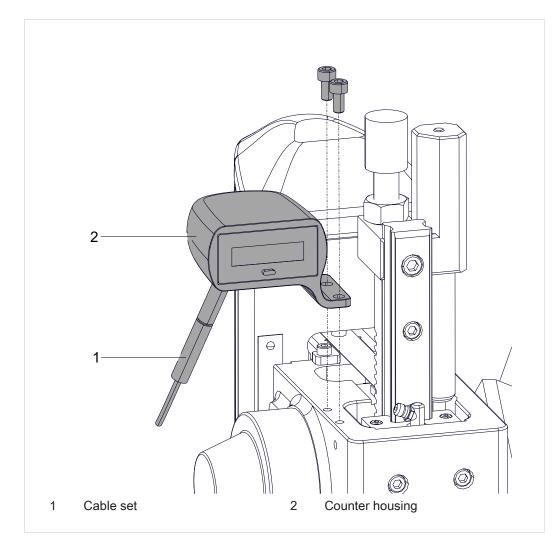


### 6.3.3 Installing the stroke counter (optional)

- 1. Disconnect the cable set from the counter housing.
- 2. Install the counter housing on the press head using cylinder screw M 5x12.




#### Installing the button

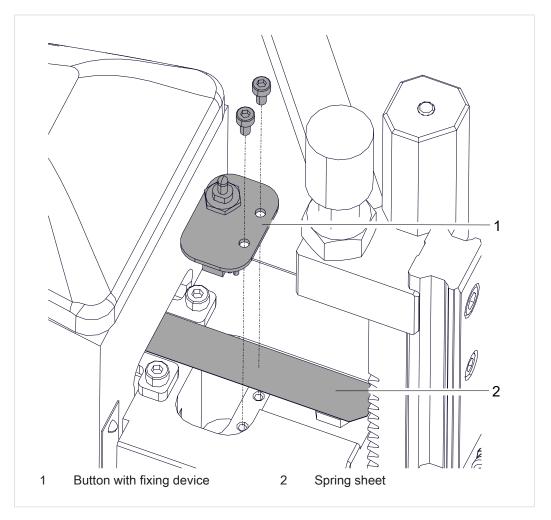

- 1. Disassemble the spring sheet.
- 2. Screw the push button with fixing device onto the press head (cheese head screws M 3x8).
- 3. Install the spring sheet.
- 4. Check the switching point of the push button. The push button must switch shortly before reaching the final position. The switching point is set using the two nuts on the push button.
- 5. Connect the cable set to the counter housing.




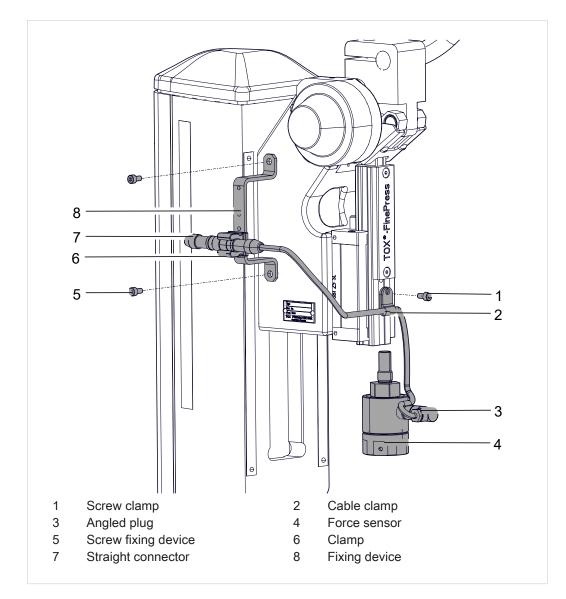

### 6.3.4 Installing the force sensor (optional)

- 1. Screw the fixing device onto the press head.
- 2. Screw the force sensor onto the ram.
- 3. Fasten the cable clamp with the screw.
- 4. Connect the angled plug to the force sensor.
- 5. Screw the clamp in the lowest position onto the fixing device.
- 6. Connect the straight connector to the evaluation unit and insert it into the clamp.



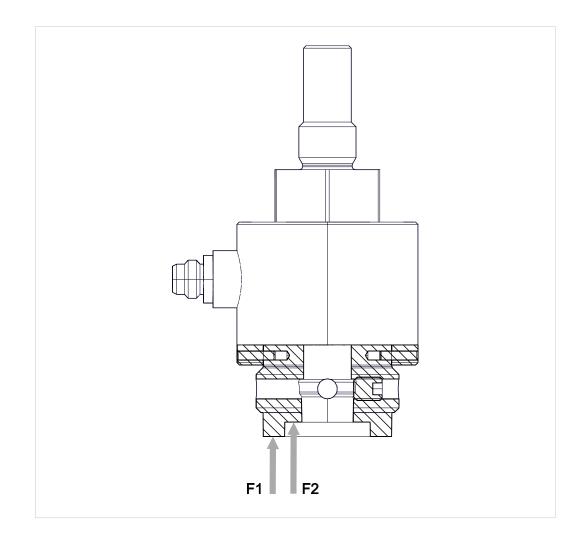


→ NOTE! Observe the maximum thread length! The tool must bear against flange 1 or flange 2.



### 6.3.5 Install the return stroke lock (option)


1

During retrofitting it may be necessary to replace the shaft. In this case, please contact TOX<sup>®</sup> PRESSOTECHNIK.

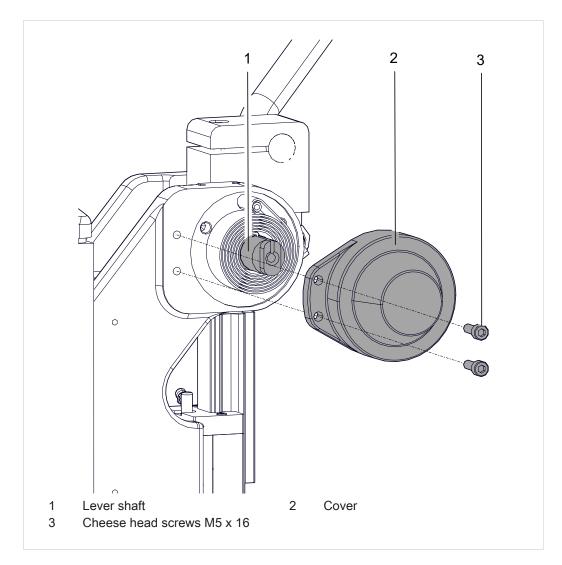


1. Unscrew the lever shaft from the cover. The flat spiral spring must nor be removed.



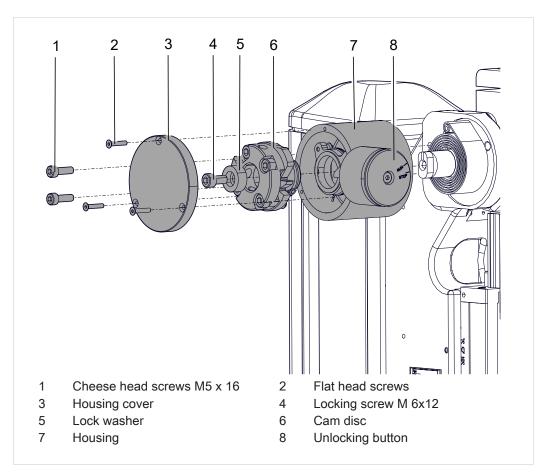

- 2. Attach the housing of the return stroke lock on the lever shaft and screw it on with the M 5x16 cylinder screws.
- 3. The unlocking button must point to the front and be positioned on <STOP>.
- 4. Insert the cam disc into the housing. The cam disk must latch in on the lever shaft.
- 5. Fix the lock washer with the M 6x12 locking screw.
- 6. The return stroke lock must be adjusted. See Adjusting the return stroke lock, Page 48.
- 7. Install the housing cover with the flat head screws.




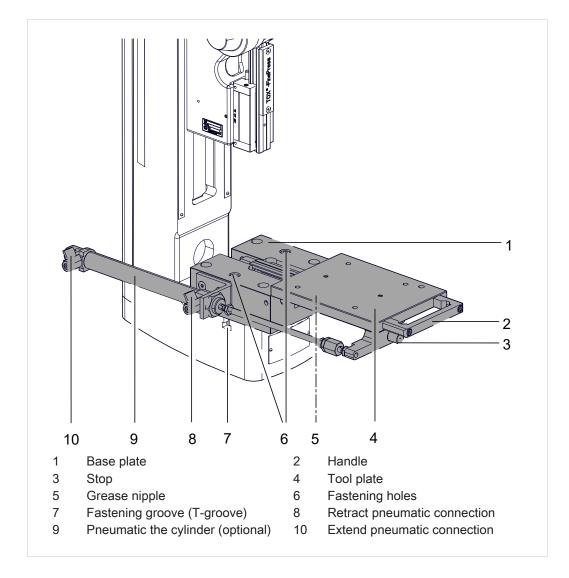

### 6.3.6 Installing the slide table (optional)

- 1. Insert the T-groove nuts into the fastening groove of the press frame.
- 2. Pull out the tool plate until the fastening holes are accessible.
- 3. Screw the base plate over the mounting holes using the T-groove nuts.
- 4. The insertion width is set via the stop.




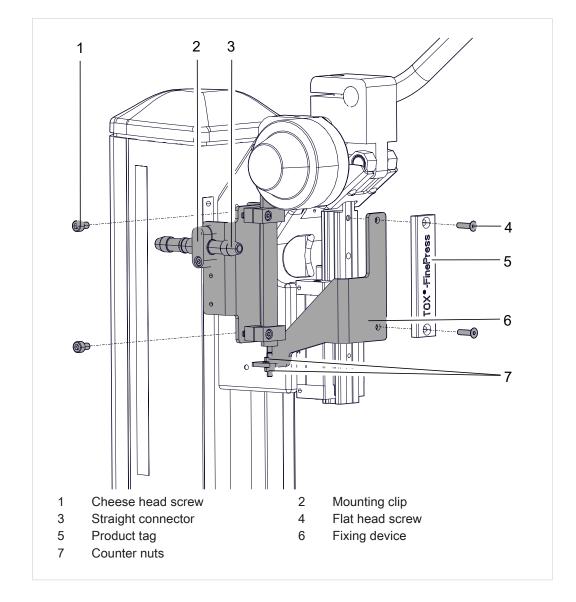

### 6.3.7 Installing travel sensor (option)

- 1. Unscrew the product tag.
- 2. Screw on the fixing device together with the tag. The travel sensor is pointing towards the press frame.
- 3. Screw the rear fixing device onto the press head.
- 4. Connect the cable to the evaluation unit.
- 5. Screw the straight connector to the fixing device using the fastening clip.
- 6. Set the zero point, see: Setting the travel sensor, Page 52.



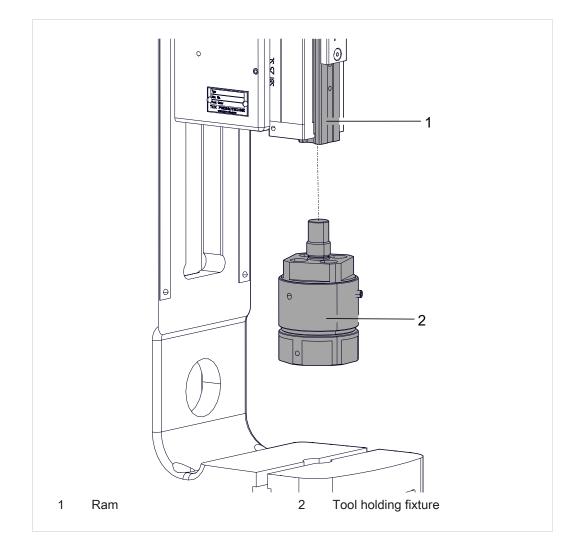

# 6.3.8 Installing the tool holding fixture (optional)

→ The tool holding fixture is screwed into the ram.

For technical data and installation dimensions see data sheet. www.tox.com





# 7 Commissioning

# 7.1 Safety during the commissioning

The commissioning may only be carried out by trained and authorized personnel.

#### 7.1.1 Safety device

All safety equipment must be properly assembled and functional.



# 7.2 Requirements for the commissioning

The requirements are:

- All components are properly installed.
- The safety devices of the entire system are properly assembled and functional.
- Any transport locks are removed.
- Supply connections, communication and control connections, material or media hoses are installed properly. The permissible values are complied with.
- No tools, installation equipment or other interfering objects may be left in the tool area or working area.



# 8 Operation

### 8.1 Safety in operation

### 

#### Dangerous lever movements!

Contusions and impacts!

- → Always hold the hand lever.
- → Release it only when it is in the top initial position.


# 8.2 Requirements for operation

- The safety devices of the entire system are properly assembled and functional.
- All piece parts are intact and properly maintained.
- Supply connections, communication and control connections, material or media hoses are installed properly. The permissible values are complied with.

### 8.3 Process monitoring

See the separate operating manual for the installation of the process monitoring system.



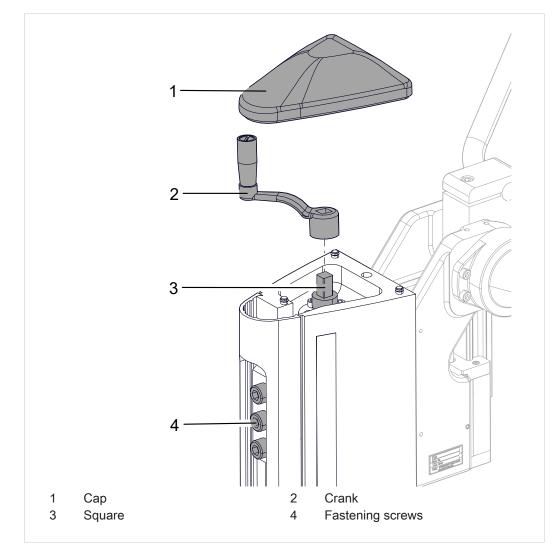

# 8.4 Setting the open height of the press head

Fig. 3 Setting the open height of the press head

**NOTE!** Damage on the tool or the workpiece! Calculate the open height before starting operation!




- Set the fine adjustment on the largest opening. See Fine adjustment of working stroke, Page 46.
- 1. Remove the cover from the press frame.
- 2. Loosen the fastening screws of the clamping plate. Do not unscrew the screws!
- 3. Place the supplied crank onto the square and adjust the open height by turning it.

Turning clockwise - increases the open height.

Turning anti-clockwise - reduces the open height.

- 4. Remove the crank and stow it away.
- 5. Tighten the fastening screws of the clamping plate. Observe the tightening torques, see Inspecting the fastening of the press head, Page 59.
- 6. NOTE! Damage on the tool! The tool must be aligned!
- 7. Place the cover on the press frame.



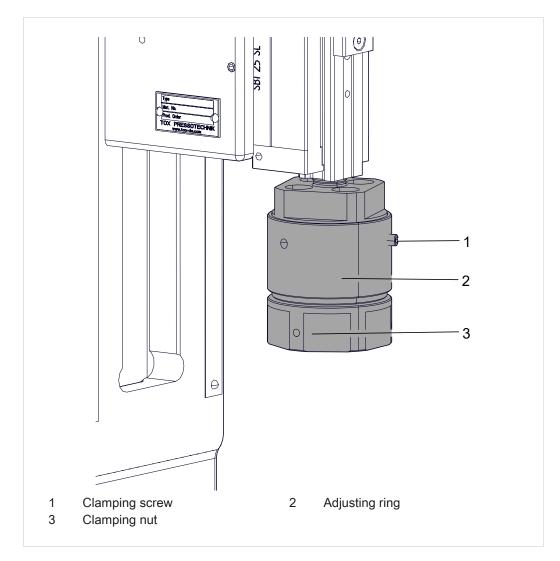


# 8.5 Fine adjustment of working stroke (option)

- 1. Loosen the clamping screw.
- Turn the adjusting ring to adjust the open height. A line on the scale of the adjusting ring corresponds to a height adjustment of 0.02 mm. Turning clockwise - increases the open height.
  - Turning anticlockwise reduces the open height.
- 3. Fix the adjusting ring with the clamping screw.



# 8.6 Setting working depth

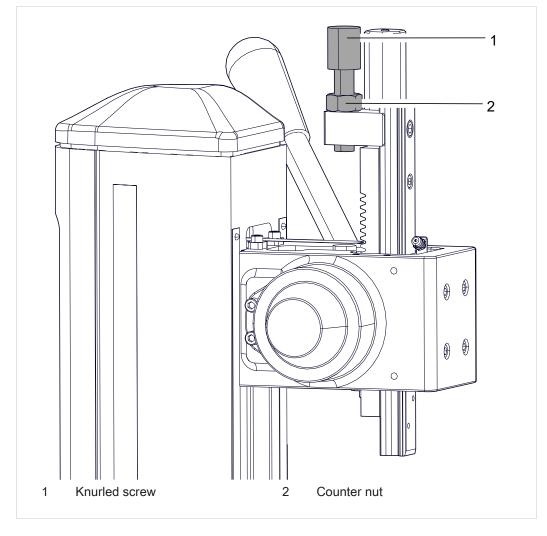



One rotation of the knurled screw corresponds to an adjustment of 1 mm.

Turn clockwise - decrease working depth.

Turn anticlockwise - increase working depth.

- 1. The working depth can be set using the knurled screw.
- 2. Secure the setting by tightening the counter nut.

### 8.7 Resetting the stroke counter (optional)


The stroke counter has a reset button.

→ Press the stroke counter button.



# 8.8 Adjusting the return stroke lock (optional)

NOTE! Do not push the hand lever back while the mechanism is locked.

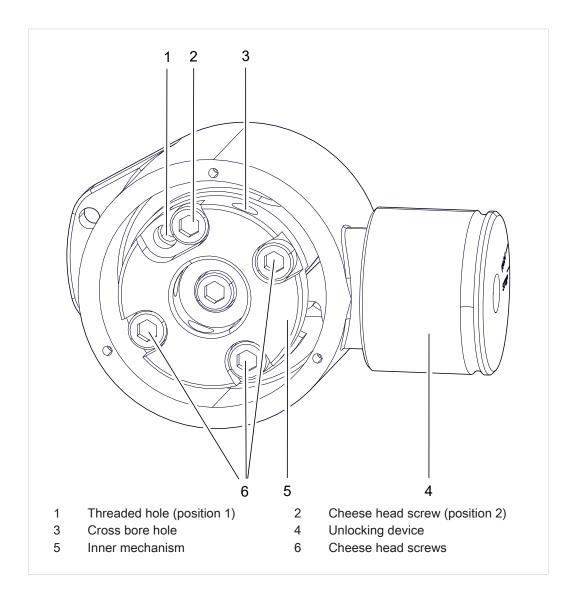




- ✓ The housing cover is removed.
- 1. Loosen the cheese head screws (positions 2 and 6).
- 2. Pull the unlocking device and turn to position <STOP> to release the hand lever.
- 3. Press the hand lever completely down and hold.
- 4. Turn the inner mechanism clockwise until the return stroke lock unlocks. The lock engages twice audibly with a click, and unlocks by turning it further.

A suitable tool (e.g. Allen key) can be inserted into the cross bore hole to turn the mechanism.

- 5. Tighten the cheese head screws (positions 2 and 6).
- 6. Install the housing cover.


#### Lever travel for position 1

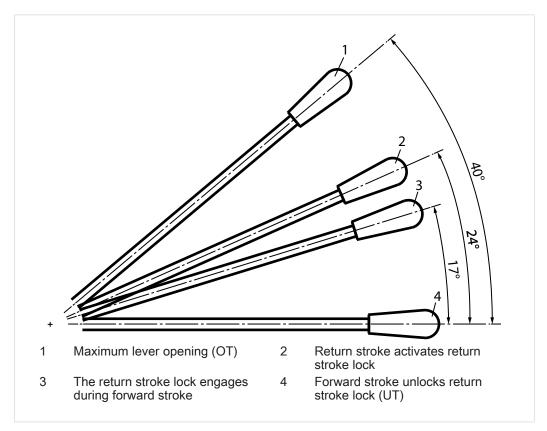

- ✓ The return stroke lock has engaged.
- ✓ The housing cover is removed.
- 1. Lock the return stroke lock in the second position.
- Unscrew the cheese head screw (position 2) and screw it into position 1 (position 1).
- 3. Install the housing cover.




#### Lever travel for position 2

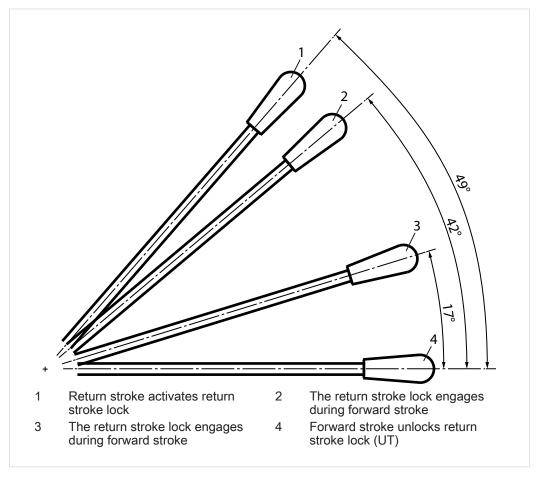

- ✓ The return stroke lock has engaged.
- ✓ The housing cover is removed.
- 1. Unscrew the cheese head screw (position 1) and screw it into position 2 (position 2).
- 2. Install the housing cover.




# 8.9 Setting the return stroke

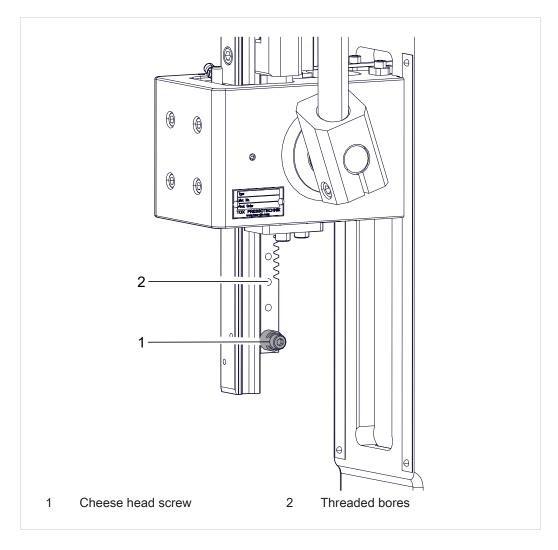

- 1. Press the hand lever down and hold.
- 2. Remove the cheese head screw.
- 3. Screw in the cheese head screw into the threaded bore at the new position.



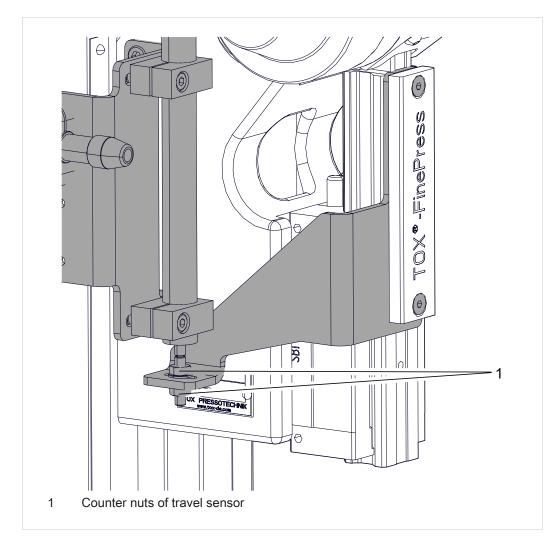

# 8.10 Setting the travel sensor (option)

- 1. Loosen the counter nuts of travel sensor.
- 2. Press the hand lever of the press firmly up and hold.
- 3. Set the zero point on the travel sensor by turning the nut.
- 4. Tighten the counter nuts of the travel sensor.



# 9 Troubleshooting

# 9.1 Safety during troubleshooting

Troubleshooting may only be carried out by trained and authorized personnel. The following applies:

- Inform operating personnel before starting repair work.
- Appoint a supervisor.



# 9.2 Detecting faults

If the press is equipped with a control system, the faults or warnings on the central control unit are displayed and described.

Fault	Cause	Measures
The ram does not ex- tend.	There is a mechanical fault on the guide.	Contact authorized service personnel.
The nominal force not reached.	There is a mechanical fault on the guide.	Contact authorized service personnel.
	The press head is not adequately fastened.	Tighten the fastening screws evenly. Observe the tightening torques, see: Inspecting the fas- tening of the press head, Page 59).



# **Maintenance table**

The specified intervals are only approximate values. Depending on the area of application, the actual values may differ from the guide values.

Maintenance cycle	Additiona	Additional information	
Weekly	10.4.1	TOX® FinePress inspecting	
Monthly	10.4.3	Inspecting and cleaning movable parts and guides	
Half-yearly	10.4.2	Inspecting the fastening of the press head	



# 10 Maintenance

## **10.1 General information**

Maintenance may only be carried out by trained and authorized personnel. The following applies:

- Observe maintenance intervals if present and stipulated.
- Maintenance intervals may vary from the stipulated maintenance intervals. The maintenance intervals may have to be verified with the manufacturer if necessary.
- Perform only maintenance work that is described in this manual.
- Inform operating personnel before starting repair work.
- Appoint a supervisor.



# 10.2 Safety during maintenance

The following applies:

- Observe maintenance intervals if present and stipulated.
- Maintenance intervals may vary from the stipulated maintenance intervals.
  The maintenance intervals may have to be verified with the manufacturer if necessary.
- Perform only maintenance work that is described in this manual.
- Inform operating personnel before starting repair work.
- Appoint a supervisor.

### **10.3 Requirements for maintenance**

#### 10.3.1 Set system to maintenance position

Unless specified otherwise, before all maintenance work:

- 1. Retract the working piston.
  - $\triangleright$  Plant is in home position.
- 2. Install a restraint device if necessary.




# **10.4 TOX® FinePress maintaining**

#### 10.4.1 TOX<sup>®</sup> FinePress inspecting

- System is in maintenance position.
  See Set system to maintenance position, Page 57.
- 1. Check the plant, particularly moving parts for wear, obvious defects and damage.
- 2. Check the supply connections for tightness.



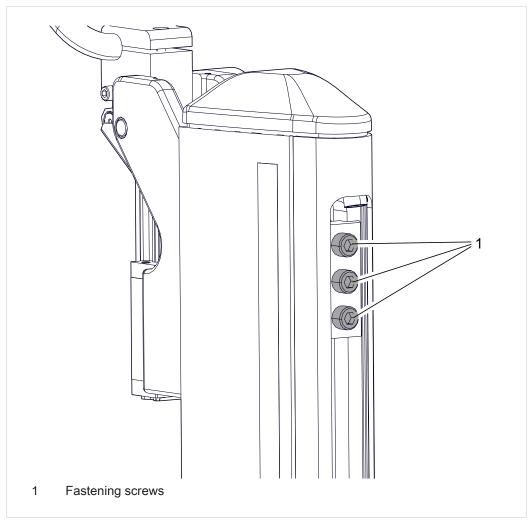

### 10.4.2 Inspecting the fastening of the press head

System is in maintenance position.
 See Set system to maintenance position, Page 57.

- 1. Check the tightening torque of the fastening screws.
- 2. **NOTE!** Damage on the tool! Check the alignment of the tool!

Screw size	Tightening torque
M 10	60 Nm

Tab. 2 Fastening screws of the press head on the frame



#### 10.4.3 Inspecting and cleaning movable parts and guides

System is in maintenance position.
 See Set system to maintenance position, Page 57.

#### NOTE

#### Incorrect cleaning agents or cleaning procedures, lack of corrosion protection!

Damage to machine components!

- Clean plastic parts such as panes (safety guard door, housing, etc.) and control elements with cotton cloths (smooth woven structure) and suitable cleaning agents (e.g. clear water and neutral rinsing liquid).
   Do not use scouring (abrasive) cleaning agents.
- → Only touch bare spots with gloves.
- ➔ For metallic surfaces use cleaning set, such as industrial cleaner (e.g. Loctite 7063, or Würth Montagekraftreiniger 0890 107), vacuum cleaner, dry cloth and brush.
- → After cleaning, protect bare outer surfaces from corrosion. Coat surfaces with a cloth slightly moistened with anticorrosive fluid.
- Keep inside surfaces, especially element-carrying parts, dry and free of grease.
- → Inspect movable parts and guides, clean and lubricate if necessary.



# 11 Repairs

# 11.1 Safety during repairs

Repairs may only be carried out by trained and authorized personnel.



# 12 Disassembly and Disposal

### 12.1 Safety during disassembly and disposal

The dismantling and disposal may only be carried out by trained and authorized personnel.

#### **A** DANGER

#### Electrical hazards in case of contact with live parts!

Electric shock, burns or death in case of contact with live parts!

- → Have all work on the electrical equipment performed by an electrician.
- Disconnect power supply.
- → Wait for residual energy to disspate safely (at least 3 minutes).

#### **WARNING**

#### **Ejecting parts and compressed air from compressed air conducting lines!** Serious injuries to eyes and body cavities!

- → Always connect and disconnect lines without pressure.
- ➔ Pay attention to maximum permitted pressures.
- → Wear individual protective equipment.

#### 

#### Sharp edges caused by material splintering!

Injuries from worn parts!

- → Wear individual protective equipment.
- $\rightarrow$  Do not move fingers along the cutting edges.
- → Be particularly careful and attentive.

### 12.2 Decommissioning

Decommissioning means that the plant is not in operation for a longer period of time but remains at the installation site for recommissioning later.

- 1. Switch off plant at the main switch.
- 2. Clean the system and protect it against corrosion.
- 3. Protect plant against loss of data and deep discharge.



# 12.3 Shutdown

Shutdown means that the system is shut down permanently and/or is prepared for removal.

- 1. Stop system and wait for it to come to a standstill.
- 2. Remove material if necessary.
- 3. Switch off the system at the main switch and secure it against being switched on again.
- 4. First disassemble or dismantle after switching off the power (electricity, pneumatics) and after residual energy has safely dissipated (at least 3 minutes).
- 5. Remove electrical supply line (first at the terminal, then on the machine).
- 6. Remove compressed air supply line.
- 7. Remove network connection.
- 8. Clean the system and protect it against corrosion.
- 9. Protect open cable ends against penetration of dirt.
- 10. Do not remove cable identifications.



# 12.4 Disassembling

The system consists of recyclable materials.

#### NOTE

#### Environmental damage!

Improper recycling endangers the environment!

- → Dispose of materials separately and properly.
- → Regional disposal regulations must be observed.
- 1. Strip the system down into its constituent parts.
- 2. Dispose of greases and oils separately.
- 3. Sort the constituent parts by material and dispose of according to the local regulations.

# 12.5 Disposal



When disposing of packaging, consumables and spare parts, including the machine and its accessories, the relevant national environmental protection regulations must be complied with.

For the environmentally compatible utilization and disposal of its electronic components, please contact the certified disposal company for electronic waste or return it to TOX<sup>®</sup> PRESSOTECHNIK.

For further information about the take-back and forms see www.tox.com in the service sector.

Regarding questions about disposal please contact TOX<sup>®</sup> PRESSOTECHNIK SE & Co. KG (see Contact and source of supply, Page 10).



# 13 Appendices

# 13.1 Declaration of conformity



### **EU DECLARATION OF CONFORMITY**

Original EU declaration of conformity

The manufacturer TOX® PRESSOTECHNIK SE & Co. KG declares herewith that the following product

Designation/function	Rack and pinion press
Product name/module	TOX <sup>®</sup> FinePress
Model/type	ZFS, ZFL, ZFW
Serial number	see type plate

complies with all relevant provisions of the following legislation, including any changes in force at the moment of the declaration.

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Applied EU legislation: 2006/42/EC

Machinery Directive, OJ L 157 dated 09/06/2006, P. 24-86

Source references of the applied harmonized standards:

DIN EN	IISO	12100:2011-03
--------	------	---------------

Safety of machinery - General principles for design - Risk assessment and risk reduction (ISO 12100:2010); German Version EN ISO 12100:2010

Authorized to compile the technical file: Sascha Richter, Riedstraße 4, 88250 Weingarten

Place and date

Weingarten, 13.01.2025

Information on the signatory

mar Stefan Katzenmaier

Component and Region Sales Manager

Filing OC .....

# Index

# Α

Accessories	
Installing	30
Adjustment	
Return stroke lock	48
Attachment point	25

## В

# С

commissioning	41
Requirements	42
Safety	41
Safety device	41
Conformity	. 6
Contact	
Contusion	
Hazard	15

# D

Declaration of conformity	5
Decommissioning	2
Disassembly 62, 64	1
Safety 62	2
Dispatch	
Repair 26	
Disposal	1
Safety 62	2
Document	
additional	7
Validity	7
Drive/Fastening	
Inspecting 59	9

### Е

Electromagnetic	
Hazard	16
Ergonomic handle	
Installing	31
Exclusion of liability	. 6

# F

Faults	
Detect	54
Fine adjustment	
Working stroke	46
FinePress	
Inspecting	58
Maintaining	58
Force sensor	
Installing	34
Function description	21

# G

Gender note General information	7
Maintenance Guidelines	
Guides Inspecting	60

# Н

Hazard	
Contusion	15
Electrical	14
electromagnetic	16
Hazardous substances	16
hydraulic	15
Laser	16
Noise	17
Pneumatic	15
Thermal	14
Hazard potential	14
Hazardous substances	16
Hydraulic	
Hazard	15



### I

Images	
Highlighting	. 9
Important information	. 6
Information	
Important	. 6
Inspection	
Drive/Fastening	59
FinePress	58
Guides	60
Installation	27
Accessories	30
Ergonomic handle	31
Force sensor	34
Process monitoring	30
Requirement	29
Return stroke lock	36
Safety	27
Set-up location	29
Slide table	38
Stroke counter	32
Tool holding fixture	40
Intended use	

### L

LABS	0
Laser	
Hazard 1	6
Legal note	6

# Μ

Maintenance	56
FinePress	58
General information	56
Requirement	57
Safety	57
Maintenance position	57
Measures	
Organizational	12
Misuse	20
Mounting	
Travel sensor	39

# Ν

Noise	
Hazard	17
Note	
Gender	7
General	8
Legal	6
Warning signs	8

# 0

Open height of the press head	
Setting	44
operation	43
Process monitoring	43
Requirements	43
Safe	19
Safety	43
Organizational measures	12

### Ρ

Process monitoring	
Installing	30
Process monitoring system	
Operate	43
Product overview	21

### Q

Qualifications	13
	13

# R

Repair	
Dispatch 2	26
Repairs	31
Safety6	51
Requirement	
Installation 2	29
Maintenance5	57
Reset	
Stroke counter	17
Return stroke	
Setting5	51
Return stroke lock	
Adjusting	18
Install	36

# TOX®

# S

Safety	11
Commissioning	41
Disassembly	62
Disposal	62
Installation	27
Maintenance	57
Operation	43
Repairs	61
Transport	23
Troubleshooting	
Safety device	
Commissioning	41
safety requirements	
Basic	11
Operating company	12
Safety symbols	18
Selection	
Personnel	13
Selection of personnel	13
Setting	
Open height of the press head	44
Return stroke	
Travel sensor	52
Working depth	47
Set-up location	29
Shutdown	63
Slide table	
Installing	38
Source of supply	10
Storage	24
Stroke counter	
Installing	32
Resetting	47
Substances harmful to the wetting properties lacquers (LABS)	of

# Т

Target group	7
Technical data	22
Texts	
Highlighting	9
Tool holding fixture	
Installing	40
Transport	23
Attachment point	25
Safety	
Travel sensor	
Installing	39
Setting	52
Troubleshooting	53
Safety	53

### U

Use	
Intended	19

# V

Validity	
Document	7

# W

Warning signs	. 8
Working depth	
Setting	47
Working stroke	
Fine adjustment	46



