


# **TOX®-Spray System SP**

Data sheet 80.02 2018/12

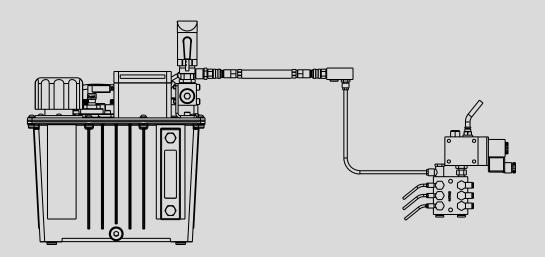

# **TOX®-Spray System**

### Spray system type SP

The TOX<sup>®</sup>-Spray Systems are used to accurately apply smallest amounts of spray media onto the areas to be machined. This reduces the joining and stripping forces for example during joining. Furthermore, the degree of forming of the materials increases due to the changed friction conditions. The workpiece surfaces and / or tools are sprayed before the joining process.

The modular design of the TOX<sup>®</sup>-Spray System enables flexible use, independent of the application. The system can subsequently be extended in complex plants.

### Spray media

Spray media with a maximum viscosity of 40 mm<sup>2</sup>/s can be applied with the spray system. The spray medium that is best suited to the technical requirements is assigned in the TOX®-Laboratory and is stated in the TOX®-Test Report. It is also possible to use spray media that are preferred by the customer. The technological usability as well as compatibility with the TOX®-Spray System must be tested and approved separately in this case.

### Design and function

#### Spray head

- Dosage of the quantity discharged
- Bundling of the spray jet
- Application of the medium

#### Valve unit with piping system

Distribution of the medium

#### Container

- Storage of the medium
- Pressure build-up (process pressure/spray pressure)

The main components are configured and supplied as closed complete system.

Pump containers or pressure vessels supply the spray heads with medium via a piping system and distributor.

The spray valves which can be individually controlled apply the medium in the desired position.

Medium		Ethanol water 50%	Induoil HL 2	Induoil HL 4	Induoil HL 20	Induoil HL 40
Viscosity at 40° C	mm²/s	1.1	1.4	2.5s	20	35
Spray head		SPE	SPE	SPE	SPE	SPK
min. quantity per impulse	[ml]	0.01	0.01	0.011	0.012	0.013
Standard nozzle	[mm]	0.25	0.25	0.25	0.25	0.2
Pipeline pressure/container pressure	[bar]	2 - 2.5	2 - 2.5	2 - 2.5	2 - 2.5	2 - 2.5
Normal use		Aluminium	Aluminium	Steel	Steel	Stainless steel
Comment		volatilised	volatilised	with residues	with residues	with residues

Note: When using non-volatile spray media, spray media residue might remain on the component.

#### Combination option of main components

Viscosity	Spray head	Pump container	Pressure vessel	Valve unit SPV 02
1 - 20 mm²/s	SPE		•	not required
1 - 40 mm <sup>2</sup> /s	SPK			•
> 40 mm <sup>2</sup> /s	on request	_	_	_


# Main components




### Spray head SPE

- Main body with integrated valve
- Spray distance up to approx. 300 mm
- Electrically controlled
- Incl. 1000 mm connection cable with plug M12x1
- Incl. 1000 mm medium hose
- Incl. joint holder SPG
- Incl. filter SPF

Version	Cable outlet		
	0°	90°	Quick coupling and screw connection
00		-	1 (A)
01	•	-	-
03	-		
04	-		-

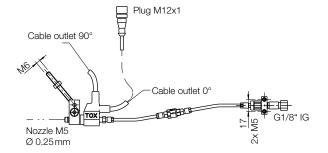

#### Sample order




#### **Technical data spray valve:** Voltage: 24VDC

Power: 5 W Connection: Plug M 12, 5-pole + 24 V PIN 4 0 V PIN 3

### Spray head SPK

- Coaxial spray head
- Spray distance up to approx. 300 mm
- Pneumatically controlled
- For spray media with viscosity up to 40 mm<sup>2</sup>/s
- Connections: M-Medium, S-Control air
- Incl. joint holder SPG
- Incl. filter SPF

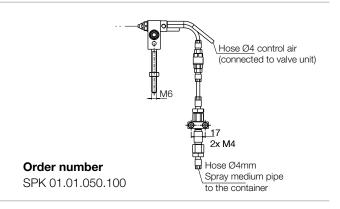

### Joint holder SPG

- Spray head clamp
- Connection thread M 6


Flexible holder for spray heads SPE and SPK. Enables accurate setting of the spray direction.

Integrated into spray head, can be ordered separately.


### Filter SPF

- Screw connection for hose line
- Connection Ø 4 mm
- Mesh size 0.75 µm

Integrated into spray head, can be ordered separately.



Order number SPG 01.00

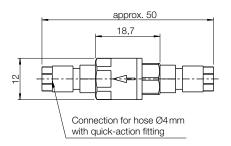

Order number


SPF 03.075.00.000


3

# Main components

### Valve unit SPV 02

- 3/2-way valve for controlling spray head SPK
- Connection thread 1/4"

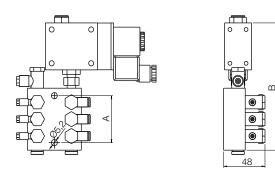




Туре	SPV 02.01.01A	SPV 02.01.02A	SPV 02.01.03A
Connections	1 x Medium 1 x Control air	2 x Medium 2 x Control air	3 x Medium 3 x Control air
А	32	32	50
В	113	113	136

### Distributor SPV 06 for spray media

Type SPV 06.01.00

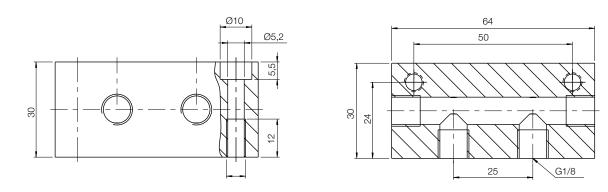




### TOX®-Pressure Vessel SPB 06.02.02.20

consisting of:

- Filler container pot made of stainless steel with 61 capacity
  - Feed opening with blanking cover
  - Filling aid
  - Wall mount
- Pressure regulator for adjusting the container pressure (0 – 6 bar), air shutoff valve for application of compressed air with fast aeration, TÜV (Technical Inspection Agency) safety valve, medium feed by means of riser with check valve and filter
- Potential-free 2-point level monitoring
  - 1. switching point approx. 30% before empty
  - 2. switching point approx. 10% before empty
  - Connection: Plug M12x1, 5-pole

### Advantages

- Increased chemical resistance
- Easy handling
- Also suitable for ethanol water
- Simple integration into complete system

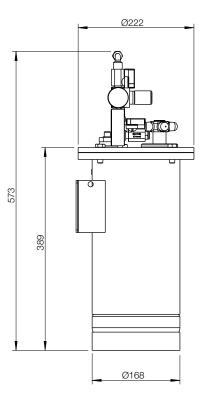

### TOX®-Pump Container SPB 12.02.01.00

consisting of:


- Aluminium container with approx. 11I capacity for the use of induoil HL2, HL4, HL20, HL40 as spray medium
- Electric pump for building up system pressure
- Potential-free 2-point level monitoring
  - 1. switching point approx. 30% before empty
  - 2. switching point approx. 10% before empty

#### **Optional:**

 Connection cable for connecting TOX<sup>®</sup>-Control and spray medium container

### Advantages

- Control technology for filling the container and controlling the medium pressure
- Sensors for leak detection (for example in case of hose bursts)
- Filling possible during the clinching process

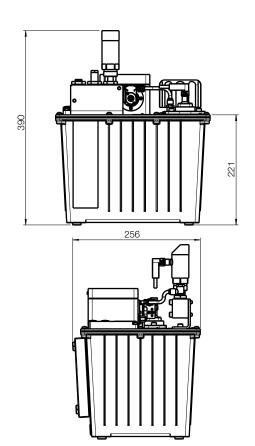

## **Standard versions**

### Spray system SP 01

#### Spray head SPK with TOX®-Pressure Vessel


for viscosity up to 40 mm<sup>2</sup>/s

- Spray head SPK
- Valve unit SPV 02, max. 3 spray nozzles per valve unit possible
- Piping system max. 10 m
- TOX<sup>®</sup>-Pressure Vessel SPB 06.02.02.20

#### **Operating principle**

The pressure vessel supplies the spray nozzle with the medium via the piping system. An upstream 3/2-way valve controls the opening time of the spray nozzles or the quantity discharged respectively.

Spray distance up to 300 mm.

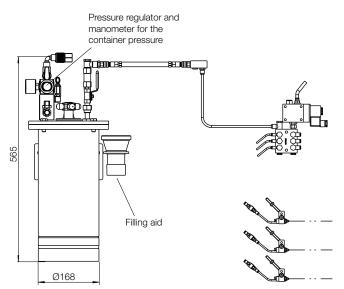

### Spray system SP 02

#### Spray head SPE with TOX®-Pressure Vessel

for viscosity up to max. 20 mm<sup>2</sup>/s


Spray head SPE

- Distributor SPV 06, max. 5 spray nozzles per distributor possible
- Piping system max. 10m
- TOX<sup>®</sup>-Pressure Vessel SPB 06.02.02.20

#### **Operating principle**

The pressure vessel supplies the spray nozzle with the medium via the piping system. The opening time or quantity discharged is controlled by an integrated electromagnetic valve (integrated into the spray head).

Spray distance up to 300 mm.

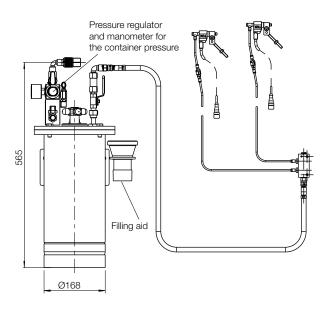



### Spray system SP 04

#### Spray head SPE with depressurised TOX®-Pump Container

for viscosity up to max. 20 mm<sup>2</sup>/s

Spray head SPE

- Distributor SPV 06, max. 5 spray nozzles per distributor possible
- Piping system max. 10 m
- TOX<sup>®</sup>-Pump Container SPB 12.02.01.00

#### **Operating principle**

The pump container supplies the spray nozzle with the medium via the piping system. The opening time or quantity discharged is controlled by an integrated electromagnetic valve (integrated into the spray head). The system pressure is generated via an electric pump.

Spray distance up to 300 mm.

### Spray system SP 05

#### Spray head SPK with depressurised TOX®-Pump Container

for viscosity up to 40 mm<sup>2</sup>/s

Spray head SPK

- Valve unit SPV 02, max. 3 spray nozzles per valve unit possible
- Piping system max. 10 m
- TOX<sup>®</sup>-Pump Container SPB 12.02.01.00

#### **Operating principle**


The pump container supplies the spray nozzle with the medium via the piping system. An upstream 3/2-way valve controls the opening time of the spray nozzles or the quantity discharged respectively. The system pressure is generated via an electric pump.


Spray distance up to 300 mm.

### Spraying through stripping sleeves

#### **Operating principle**

A mixture of spray medium and air is premixed in a chamber in the stripper and / or tool holding fixture and then sprayed onto the workpiece through the stripper by an air pulse.

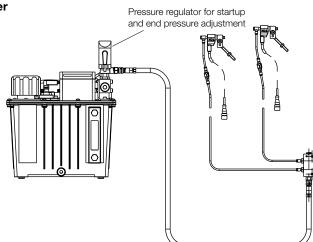

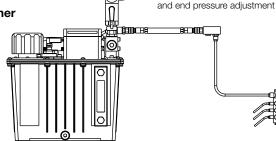

BETTIME

Pressure regulator for startup

